


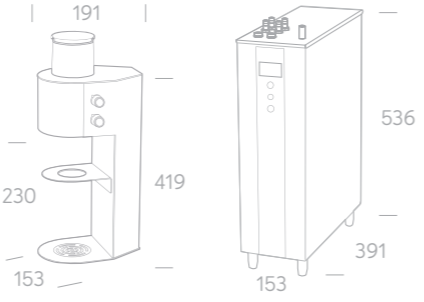
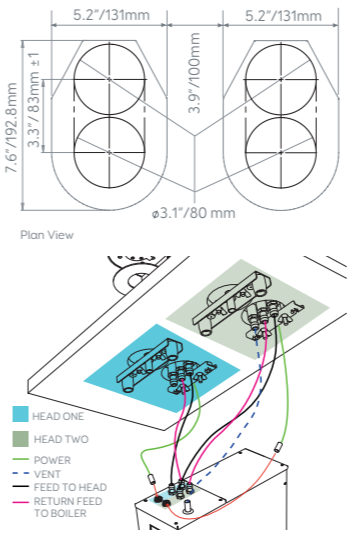
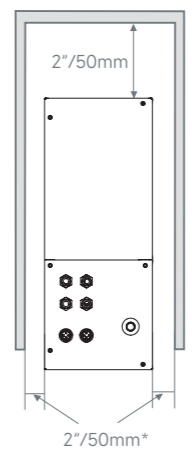
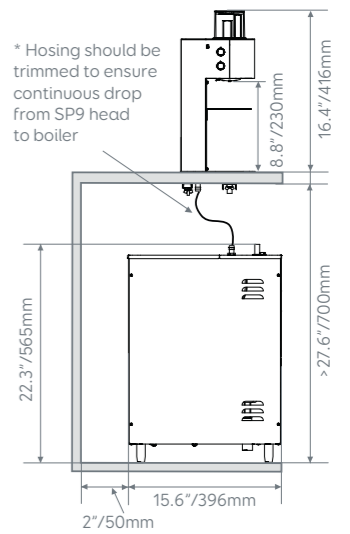


SP9 SINGLE 1000832	SP9 TWIN 1000833	SP9 BOILER	DIMENSIONS
			
<ul style="list-style-type: none"> Compatible with most manual pourover brewing devices (e.g. Chemex, Kalita, Hario) Precise water temperature 		<ul style="list-style-type: none"> Analog interface Preset brewing time (1 to 5 minutes) Preset volume (150 to 750ml) 	

SP9 SINGLE-SERVE PRECISION BREWER

COUNTER CUTOUT	CABINET CLEARANCE	SP9 SINGLE 1000832 SP9 TWIN 1000833
	 <p>* Required for ventilation if the machine is installed in an enclosed cabinet.</p>	 <p>* Hosing should be trimmed to ensure continuous drop from SP9 head to boiler</p>

SINGLE-SERVE UNDERCOUNTER PRECISION BREWER.

MIX 1 button font can be used with SP9 boiler and single head. Note: single temperature only.	OPTIONAL	
	MIX 1 BUTTON FONT 1000878	MIX DRIP TRAY 2300268
		

NAME ORDER CODE	POWER @ 230V	IMMEDIATE DRAW OFF	ABOVE COUNTER DIMENSIONS (D x W x H mm)	UNDERCOUNTER BOILER DIMENSIONS (D x W x H mm)	TAP TO TRAY (T mm)	PLUMBING REQS
SP9 Head only 1000830	—	—	191 x 153 x 419	—	—	3/4" BSP
SP9 Single Head with Boiler 1000832	2.4kW	4 L	191 x 153 x 419	391 x 153 x 536	230	3/4" BSP
SP9 Twin Head with Boiler 1000833	2.4kW	4 L	191 x 153 x 419 (per head)	391 x 153 x 536	230	3/4" BSP

NAME ORDER CODE	DIMENSIONS (D x W x H mm)	TAP TO TRAY (T mm)
MIX 1 Button Font 1000878	132 x 38 x 242	200
MIX Drip Tray 2300268	170 x 125 x 35	—

GOOD TO KNOW
 SP9 Single (1000832) is packed and shipped in two boxes, SP9 Twin (1000833) is packed and shipped in three boxes.

ELECTRICAL INSTALLATION PROCEDURE

When installing the machine, always observe the local regulations and standards. The standard machine is supplied with a UK 3-pin plug. For EU models a 2-pin CEE-7 plug will be supplied. US models will be supplied with the suitable plug. A suitable mains power supply socket should be available within easy access of the appliance so that it can be disconnected easily after install.

PLUMBING INSTALLATION PROCEDURE

- Ensure that the equipment is installed according to local plumbing & water regulations.
- Mains water pressure required (limits): 14.5 - 145psi (100 - 1000kPa, 0.1 - 1MPa).
- Requires inline water filter within your water specifications.
- The machine is supplied with a 3/4" BSP connection.
- Turn on the water to flush any impurities, dust etc from the inlet hose and water pipe. Allow several litres through. Especially for new installations.
- Connect the hose to the inlet valve of the boiler. Make sure a sealing washer is fitted.
- Turn on water and check for leaks.
- The SP9 Head has a drip tray attached with a drain outlet which should be plumbed to waste.

OPERATING BOILER FOR THE FIRST TIME

- Check that all installation procedures have been carried out.
- Ensure the water valve is on.
- Plug in the SP9 Boiler to an appropriate electrical supply and press the power button on the front of the machine.
- The light will glow green and the machine will fill to a safe level, above the elements, before heating.
- The "Ready/Status" light will cycle two red flashes while the machine is filling to the safe level.
- Whilst the machine is above the safe level and filling, the "Ready/Status" light will remain blank.
- The "Ready/Status" light will glow green when the machine is both full and up to normal operating temperature.
- The SP9 Boiler takes 15 minutes to heat up initially.
- The SP9 Boiler is now ready for use.

NOTE: Because the machine is electronically controlled no priming is necessary.

ASSOCIATED PRODUCTS
(SOLD SEPARATELY)

BOILERS & HEADS

FONTS &
ACCESSORIES